



# Outdoor shower installation guide

Serial nr .....


1. Remove the washers and hex nuts (4 pcs)

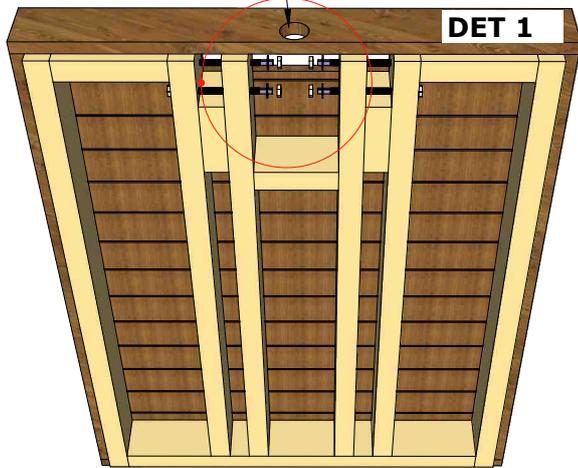


2. Remove the shown boards.

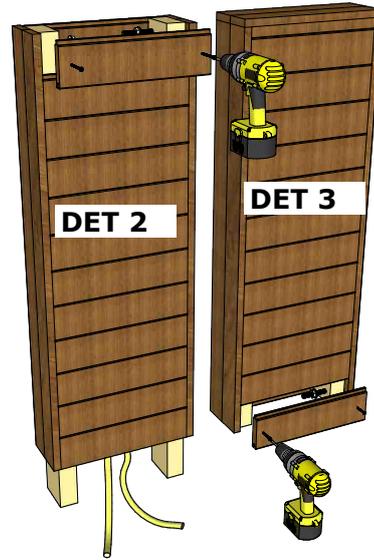


3. Remove the hex nuts (4 pcs)

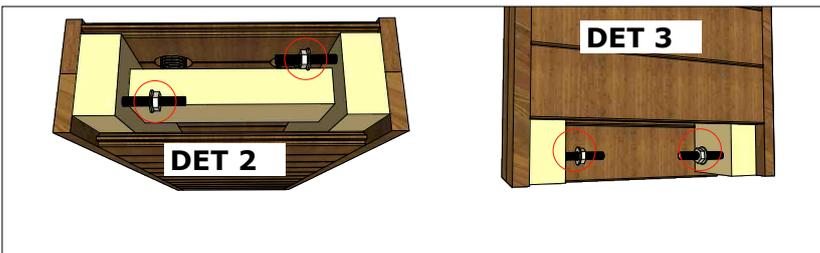


4. Install DET 2, hoses through the hole

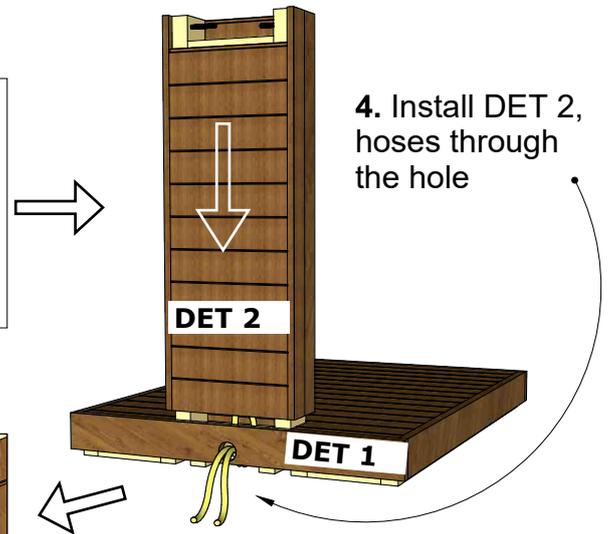


5. Fasten DET 2 to DET 1

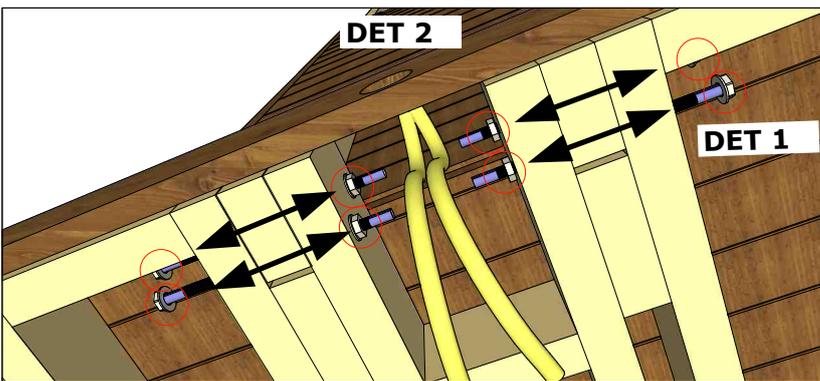


8. Screw the boards back

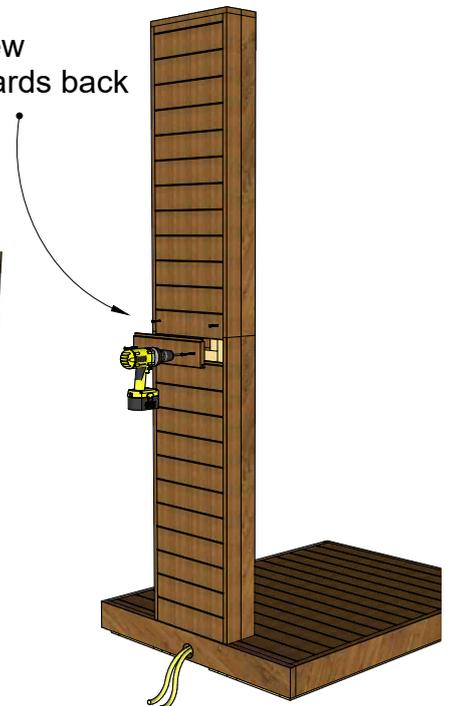






6. Fasten DET 3 to DET 2

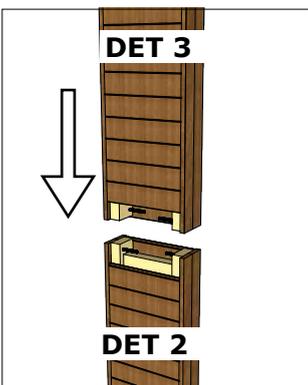

7. Use the marked blocks (left/ right) to secure DET 2 and DET 3 with bolts

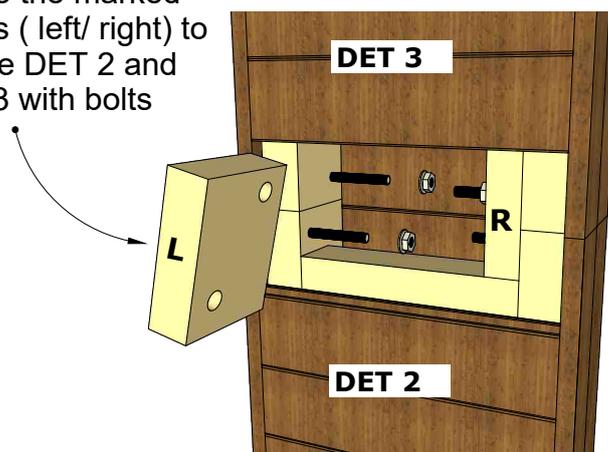

# Details

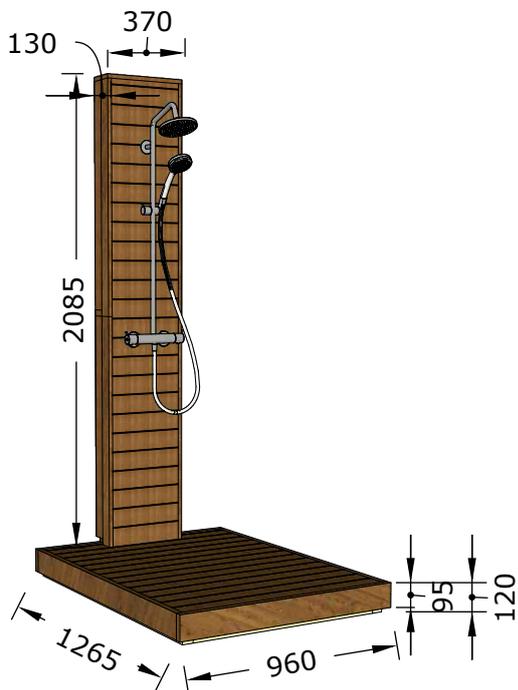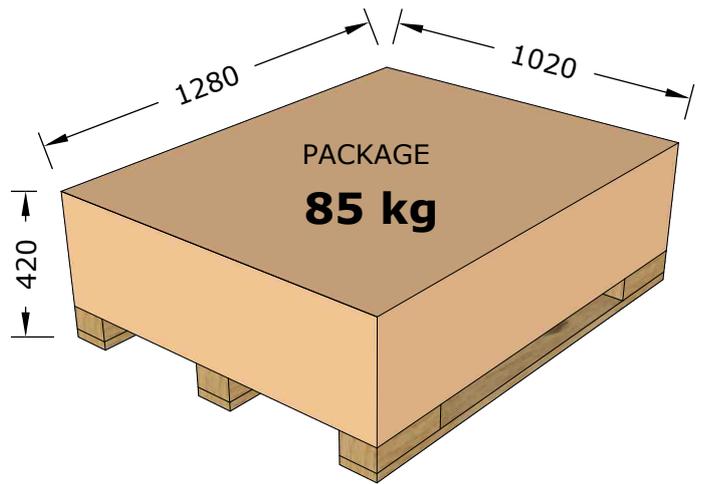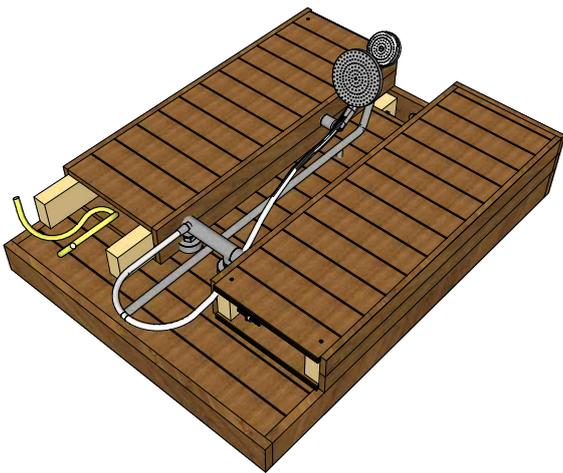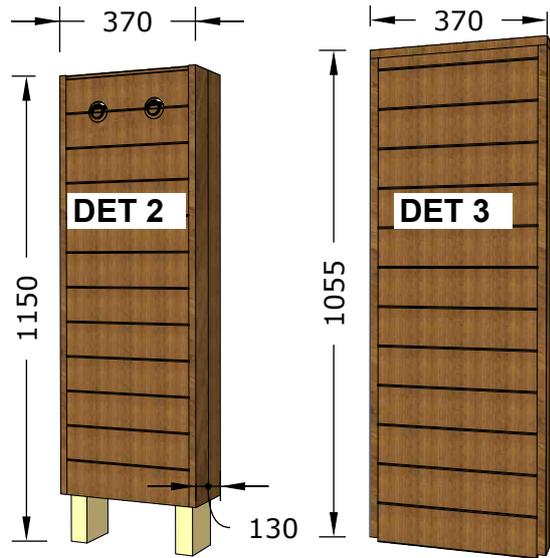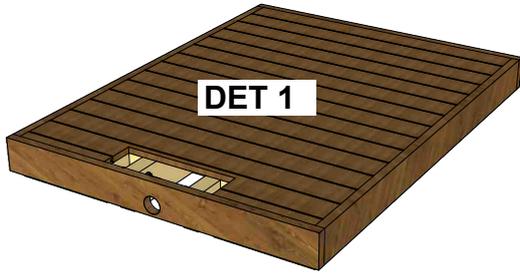

Included if ordered

